


# Com Dangle with Batwing Clip Installation Guidelines

## CD12W



Attach Com Dangle with batwing clip to ceiling wire.

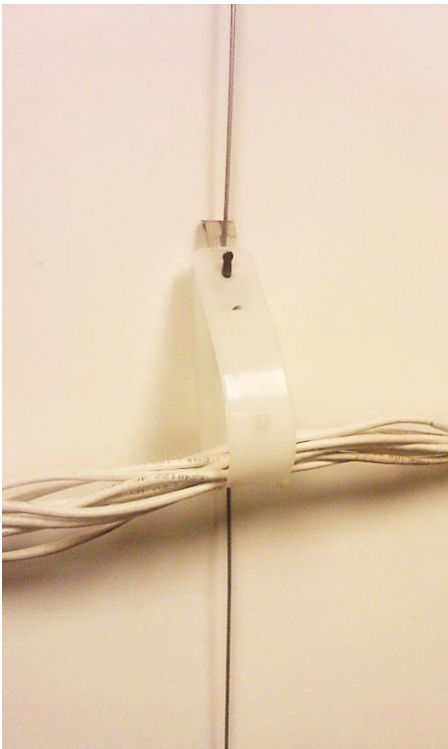

Lay wires within Com Dangles loop and close by inserting hook into ¼" hole in Com Dangle. This process can be done over and over again to add or remove cables.